



Pick+

Quick Start Guide

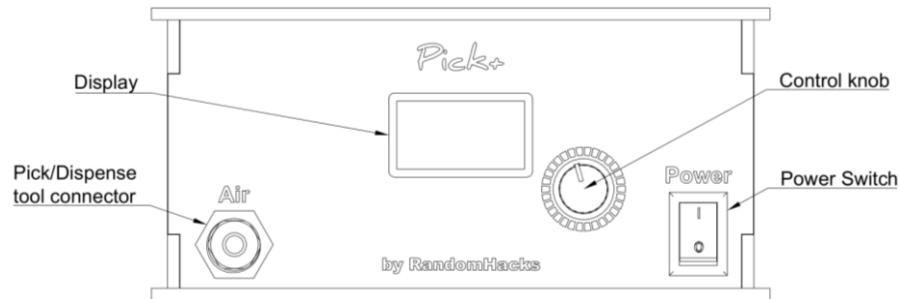

Front view of the Pick+ station

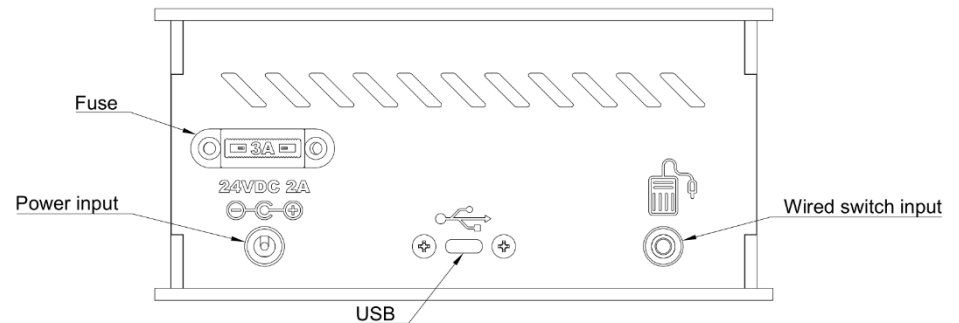

Back view of the Pick+ station

- 1- Connect the included power supply to the power input on the back of the station, connect a power cord with IEC C13 connector (not included) to the power supply and plug the other end to an available mains outlet.
- 2- If you purchased a wired switch connect it to the wired switch input using the included cable.
- 3- Connect the picking tool or dispensing syringe (comes as part of the optional dispensing kit) to the pneumatic quick push connector marked as "Air".
- 4- If you purchased a wireless footswitch, remove the single philips screw on its bottom side, press the switch and slide the metal rod out, slowly release the switch (be careful, there is a spring inside) install the CR2032 coin cell (not included due to shipping restrictions) and reassemble the footswitch.
- 5- Turn on the power switch on the front of the station, select the desired mode and **have fun!**

Note:

It is recommended to start with the default settings and adjusting as needed. For picking/dispensing make sure you select the right needle tip for the job.

For complete instructions visit bit.ly/pickDocu

