



# Slurp'nPick+

## Quick Start Guide

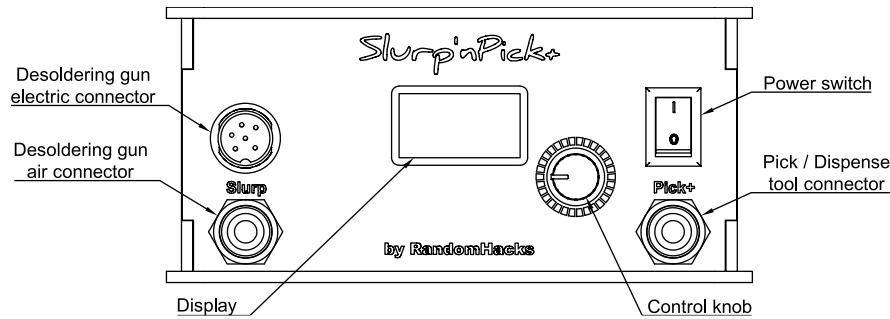

*Front view of the Slurp'nPick+ station*

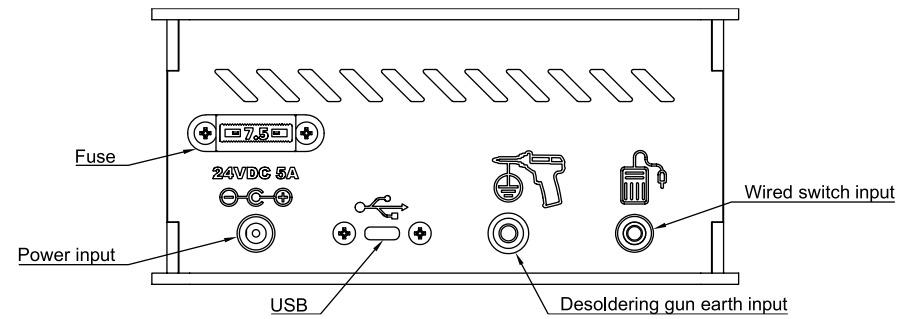

*Back view of the Slurp'nPick+ station*

- 1- Connect the included power supply to the power input on the back of the station, connect a power cord with IEC C13 connector (not included) to the power supply and plug the other end to an available mains outlet.
- 2- If you purchased a wired switch connect it to the wired switch input using the included cable.
- 3- Connect the picking tool or dispensing syringe (comes as part of the optional dispensing kit) to the pneumatic quick push connector marked as "Pick+".
- 4- Connect the desoldering gun's (optional purchase) air hose to the pneumatic quick push connector and the cable to the aviation connector marked as "Slurp" on the front of the station (note that the connector is keyed).
- 5- If you purchased a wireless footswitch, remove the single philips screw on its bottom side, press the switch and slide the metal rod out, slowly release the switch (be careful, there is a spring inside) install the CR2032 coin cell (not included due to shipping restrictions) and reassemble the footswitch.
- 6- Turn on the power switch on the front of the station, select the desired mode and **have fun!**

### Note:

It is recommended to start with the default settings and adjusting as needed. For picking/dispensing make sure you select the right needle tip for the job. If you want to ground the desoldering gun for ESD protection you can do so by connecting a standard 4mm banana cord to the back of the station and connecting the other end to your earth point.

For complete instructions visit [bit.ly/slurpDocu](https://bit.ly/slurpDocu)

